

# INSTALLATION INSTRUCTIONS

## 51525 APPLICATIONS

Make	Model
Chevy	Silverado


## NOTICE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.

## LOCATION GUIDE

### Representative vehicle shown below

**BH1** - Under dash, left of steering column, near emergency brake pedal

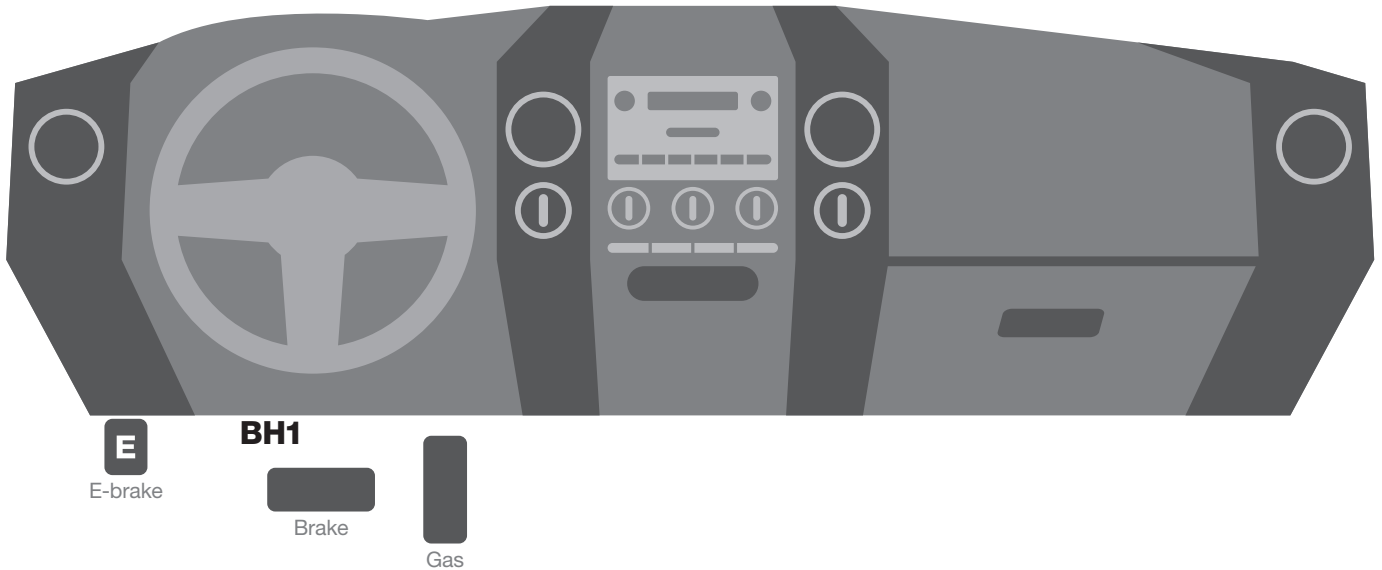

## INSTALLATION / SAFETY INSTRUCTIONS

### Step 1

Locate the vehicle brake control harness connector underneath the dash, just to the left of the steering wheel and taped to another harness near the emergency brake pedal (A). The connector will be similar to that on the CURT brake control harness.

### Step 2

Once the electric brake control connector is located, remove the tape and mating dust cover from the connector.

### Step 3

Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place.

### Step 4

Insert the black connector of the brake control harness into the brake control quick plug connector. Secure the brake control harness with the provided cable ties, avoiding any pinch points.

### Step 5

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.

